RWC2100F Remote Control Commands

Version 1.071

MAY. 11, 2026



CONTENTS

1. Introduction 4
    1.1. Command Structure 4
        1.1.1. Command Format 4
        1.1.2. Configuration Command Parameter and Response 4
        1.1.3. Read Command Parameter and Response 5
2. Interface 6
    2.1. RS232 6
        2.1.1. RS232 Port Connection of RWC2100F 6
        2.1.2. Parameters of RS232 6
    2.2. Ethernet Interface 6
        2.2.1 The IP setup of the remote PC 7
        2.2.2 Definition network socket in user application program. 8
        2.2.3 The IP setup of the RWC2100F 8
        2.2.4 Control example using the scripter function of the RWC2100F application 8
3. Command Tables 9
    3.1. SYSTEM 9
    3.2. RF_COMMON 10
    3.3. FM_TX 11
    3.4. AM_TX 20
    3.5. FM_RX 22
    3.6. AUDIO 23

Remote control Programming

Users can control the RWC2100F remotely through Ethernet or RS232C interface using a comprehensive set of commands. This section provides the necessary information to operate the RWC2100F under Ethernet and RS232C control.

1. Introduction
2. Interface
3. Command List

1. Introduction

The RWC2100F provides a remote control method using string-based control commands. This method is very easy to understand and provides flexible backward compatibility with new versions of FW.

1.1. Command Structure

1.1.1. Command Format

The format of command is like as the below:

CMD_TYPE:CATEGORY:FUNCTION <param1> <param2> <param3> EOL

CMD_TYPE

CMD_TYPE consist of *configuration* and read *command*

Commands consist of *set commands* and *query commands* (usually simply called commands and queries). Set commands change instrument settings or perform a specific action. Queries cause the RWC2100F to return data and information about its status. Most commands have both a set form and query form. The set form of the command is started with “CONF” and the query form of the command is started with “READ”.

One of examples of the set commands and query commands is shown below respectively:

CONF:TX_FM:FREQUENCY 88.7
READ:TX_FM:FREQUENCY?.

CATEGORY

There are five categories such as SYSTEM, FM_TX, AM_TX, FM_RX, and AUDIO.

FUNCTION

The part is a command corresponding to an action. For example, it is a command such as frequency or power.

If it needs parameters, a *space* is used to separate parameters from commands. In the case of commands with more than one parameter, a space is required between the parameters.

EOL (End Of Line)

All commands should be finished with EOL characters such as ‘\n’ or ‘\r’.

1.1.2. Configuration Command Parameter and Response

RWC2100F responds ”ACK” or “NAK” for all configuration commands. If the command and parameters are valid, it responds ACK, and if invalid, it responds NAK.

There are three types of commands with respect to the number of parameters.

Single Parameter

CONF:RX:PATHLOSS 0.5\n
ACK

CONF:AUDIO:ENABLE YES\n
ACK

Double Parameters

CONF:FM_TX:POWER_DBM 1 -15\n
ACK

CONF:AM_TX:AUDIO_SOURCE 2 SING_A_SONG.WAV\n
ACK

Triple Parameters

CONF:FM_TX:AF_FREQ 2 5 88.7\n
ACK

CONF:FM_TX:AF_VARIANT 1 1 91.1\n
ACK

1.1.3. Read Command Parameter and Response

There are three types of read commands with respect to the number of parameters. The response can be text, integer, or double values. But all responses are ASCII formatted

No Parameter

*IDN?\n
RWC2100F Analog Radio Tester, Ver=1.000, SN=RWC21000000000

Single Parameter

READ:FM_TX:FREQ? 1\n
88.7

READ:FM_TX:RT_HEADLINE 1\n
RedwoodComm

Double Parameters

READ:FM_TX:ERT_TAG_TYPE? 1 0\n
ITEM_TITLE

READ:FM_TX:AF_VARIANT 2 3\n
91.1

2. Interface

The RWC2100F supports RS232C and Ethernet interfaces on the rear panel for remote control operation. Ethernet is used for high speed and flexible interfaces. But socket programming is required to use Ethernet. RS232C is a slow serial interface, but it does not require any special equipment and is easy to use.

2.1. RS232

2.1.1. RS232 Port Connection of RWC2100F

RWX2100F has a DSUB9 connector for the RS232 interface.
Users can use a DSUB9 cross cable defined as the figure 1.

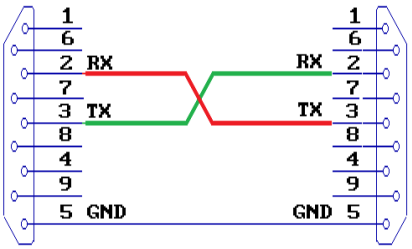

RWC2100F Remote PC

Figure 1. Cable connection of DSUB9 for RS232

2.1.2. Parameters of RS232

All parameters of RS232 of the RWC2100F are fixed as follows.

Parameter	Range	Description
BAUD RATE	115200	fixed
DATA BITS	8-bit	Length of Data bit
PARITY	Off	Error check bit
STOP BIT	1-bit	Stop bit

2.2. Ethernet Interface



Figure 2. Controlling with the scripter of RWC2100F PC application

2.2.1 The IP setup of the remote PC

RWC2100F has a RJ45 connector for LAN connection. Connect RWC2100F to your network hub with RJ45 LAN cable. If the PC and RWC2100F are connected directly, a cross cable must be used. For direct connection, set up the IP address static as follows.

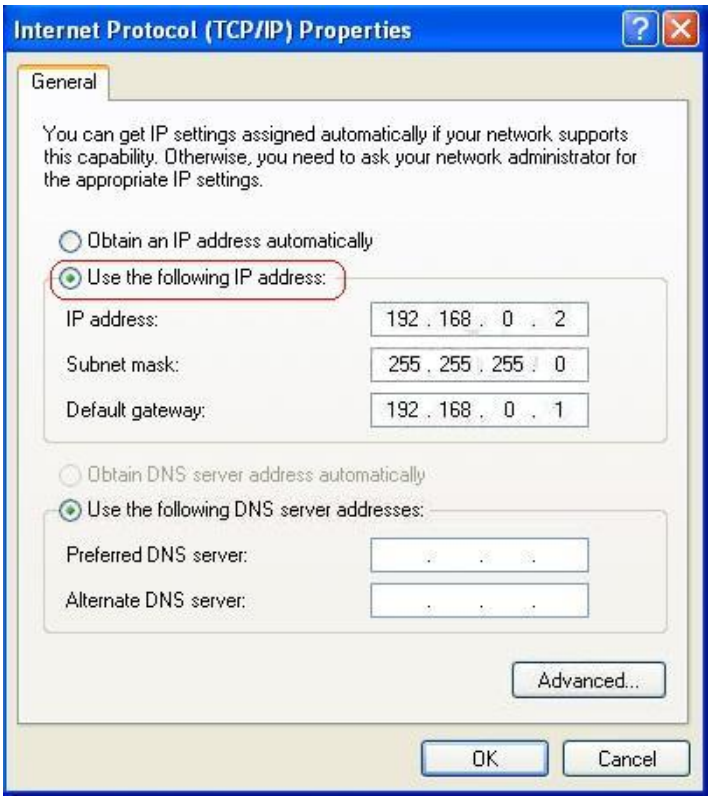

Figure 3. IP Configuration

2.2.2 Definition network socket in user application program.

RWC2100F uses the UDP protocol type. If you control with your own PC application or terminal program, you have to define your network protocol as a UDP.

```
Socket Rwc2100fSock;
String IP_ADDR_RWC2100F = “192.168.0.100”;
LocalAddress = IPAddress.Any;
LocalIpEndPoint = new IPEndPoint(LocalAddress, Convert.ToInt32(IP_ADDR_RWC2100F));
Rwc2100fSock = new Socket(LocalAddress.AddressFamily, SocketType.Dgram, ProtocolType.Udp);
```

Example code with C#

2.2.3 The IP setup of the RWC2100F

It supports only IP4 format. It supports both dynamic and static IP address setup. Whenever you toggle the button on the rear panel of RWC2100F, the address type will be toggled between dynamic and static IP address. In dynamic mode, the RWC2100F will get the IP address from your DHCP server. In static mode, it will keep the same IP address that was assigned by DHCP server when in dynamic mode.

2.2.4 Control example using the scripter function of the RWC2100F application

Users can control the RWC2100F remotely using the scripter of RWC2100F PC application program. Controlling with LAN connection rather than RS232 is strongly recommended for more stable operation.

3. Command Tables

3.1. SYSTEM

Command	<param> Range
*IDN?	
*ALIVE?	
*RST	
*SAVE <param>	SAVE_00, SAVE_01, …, SAVE_09
*RECALL <param>	SAVE_00, SAVE_01, …, SAVE_09
READ:SYSTEM:SERIAL_NUM?	
READ:SYSTEM:IP_TYPE?	
CONF:SYSTEM:IP_TYPE <param>	DYNAMIC, STATIC
READ:SYSTEM:IP_ADDR?	
CONF:SYSTEM:IP_ADDR <param>	IP4 format 255.255.255.255
READ:SYSTEM:SW_VERSION?	
READ:TESTER_MODE?	
EXEC:FDISK:FORMAT	
READ:FDISK:FORMAT_STATUS?	
READ:FDISK:FREE_SPACE?	
READ:FDISK:TOTAL_SIZE?	
READ:FDISK:FILE_NUM?	
READ:FDISK:FILE_NAME? <param>	0-(n-1)
EXEC:FDISK:FILE_DELETE <param>	0-(n-1)
READ:FDISK:FILE_SIZE? <param>	0-(n-1)

3.2. RF_COMMON

Command	<param1> Range	<param2> Range
READ:TX:AM_FM_SEL? <param1>	Channel # 1 ~ 3	
CONF:TX:AM_FM_SEL <param1> <param2>	Channel # 1 ~ 3	AM, FM
READ:TX:RF_OUT? <param1>	Channel # 1 ~ 3	
CONF:TX:RF_OUT <param1> <param2>	Channel # 1 ~ 3	ON, OFF
READ:TX:PATHLOSS? <param1>	Channel # 1 ~ 3	
CONF:TX:PATHLOSS <param1> <param2>	Channel # 1 ~ 3	-60.0 ~ 60.0
READ:RX:PATHLOSS?		
CONF:RX:PATHLOSS <param1>	-60.0 ~ 60.0	

3.3. FM_TX

Command	<param1> Range	<param2> Range	<param3> Range
READ:FM_TX:FREQ? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:FREQ <param1> <param2>	Channel # 1 ~ 3	76.0 ~ 107.9	
READ:FM_TX:POWER_UNIT? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:POWER_UNIT <param1> <param2>	Channel # 1 ~ 3	DBM, DBUV	
READ:FM_TX:POWER_DBM? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:POWER_DBM <param1> <param2>	Channel # 1 ~ 3	-90 ~ 0	
READ:FM_TX:POWER_DBUV? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:POWER_DBUV <param1> <param2>	Channel # 1 ~ 3	17 ~ 107	
READ:FM_TX:PID? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PID <param1> <param2>	Channel # 1 ~ 3	0x0001 ~ 0xFFFF	
READ:FM_TX:PS_NAME? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PS_NAME <param1> <param2>	Channel # 1 ~ 3	String(8B)	
READ:FM_TX:RT? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:RT <param1> <param2>	Channel # 1 ~ 3	OFF, RT, RT+	
READ:FM_TX:TA? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TA <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:TP? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TP <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:PRG_TYPE_MODE?	Channel # 1 ~ 3		
CONF:FM_TX:PRG_TYPE_MODE <param1> <param2>	Channel # 1 ~ 3	RDS, RBDS	
READ:FM_TX:PRG_TYPE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PRG_TYPE <param1> <param2>	Channel # 1 ~ 3	NO_TYPE NEWS CURRENT_AFFAIRS INFORMATION SPORTS EDUCATION DRAMA CULTURE SCIENCE VARIED POP_MUSIC ROCK_MUSIC	

		EASY_MUSIC LIGHT_CLASSIC SERIOUS_CLASSIC OTHER_MUSIC WEATHER FINANCE CHILDREN SOCIAL_AFFAIRS RELIGION PHONE_IN TRAVEL LEISURE JAZZ_MUSIC COUNTRY_MUSIC NATIONAL_MUSIC OLDIES_MUSIC FOLK_MUSIC DOCUMENTARY ALARM_TEST ALARM	
READ:FM_TX:PRG_TYPE_NAME? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PRG_TYPE_NAME <param1>	Channel # 1 ~ 3	String(8B)	
READ:FM_TX:AF_METHOD? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AF_METHOD <param1> <param2>	Channel # 1 ~ 3	A, B	
READ:FM_TX:AF? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AF <param1> <param2>	Channel # 1 ~ 3	OFF, ON	
READ:FM_TX:AF_NUM? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AF_NUM <param1> <param2>	Channel # 1 ~ 3	0 ~ 24	
READ:FM_TX:AF_NUM_VARIANT? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AF_NUM_VARIANT<param1> <param2>	Channel # 1~3	0 ~ 12	
READ:FM_TX:AF_FREQ? <param1> <param2>	Channel # 1 ~ 3	1 ~ 24	
CONF:FM_TX:AF_FREQ <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 24	87.6 ~ 107.9
READ:FM_TX:AF_VARIANT? <param1> <param2>	Channel # 1 ~ 3	1 ~ 12	
CONF:FM_TX:AF_VARIANT <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 12	87.6 ~ 107.9
READ:FM_TX:ECC? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:ECC <param1> <param2>	Channel # 1 ~ 3	HEX string(1B)	
READ:FM_TX:PIN_DAY? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PIN_DAY <param1> <param2>	Channel # 1 ~ 3	1 ~ 31	
READ:FM_TX:PIN_HOUR? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PIN_HOUR <param1> <param2>	Channel # 1 ~ 3	0 ~ 23	

READ:FM_TX:PIN_MINUTE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PIN_MINUTE <param1> <param2>	Channel # 1 ~ 3	0 ~ 59	
READ:FM_TX:LANGUAGE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:LANGUAGE <param1> <param2>	Channel # 1 ~ 3	0 ~ 0xFF	
READ:FM_TX:RT_CH? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:RT_CH <param1> <param2>	Channel # 1 ~ 3	2A, 2B	
READ:FM_TX:TMC_GROUP? <param1> <param2>	Channel # 1 ~ 3	1 ~ 5	
CONF:FM_TX:TMC_GROUP <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 5	ON, OFF
READ:FM_TX:TMC_LTN? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_LTN <param1> <param2>	Channel # 1 ~ 3	0 ~ 63	
READ:FM_TX:TMC_MSG_AFI? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_MSG_AFI <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:TMC_MSG_MODE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_MSG_MODE <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:TMC_MSG_I? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_MSG_I <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:TMC_MSG_N? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_MSG_N <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:TMC_MSG_R? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_MSG_R <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:TMC_MSG_U? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC_MSG_U <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:TMC? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TMC <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:TMC_LOCATION? <param1> <param2>	Channel # 1 ~ 3	1 ~ 5	
CONF:FM_TX:TMC_LOCATION <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 5	0 ~ 65535
READ:FM_TX:TMC_EVENT? <param1> <param2>	Channel # 1 ~ 3	1 ~ 5	
CONF:FM_TX:TMC_EVENT <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 5	0 ~ 2047

READ:FM_TX:TMC_EXTENT? <param1> <param2>	Channel # 1 ~ 3	1 ~ 5	
CONF:FM_TX:TMC_EXTENT <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 5	0 ~ 7
READ:FM_TX:TMC_DIVERSION? <param1> <param2>	Channel # 1 ~ 3	1 ~ 5	
CONF:FM_TX:TMC_DIVERSION <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 5	0, 1
READ:FM_TX:TMC_DIRECTION? <param1> <param2>	Channel # 1 ~ 3	1 ~ 5	
CONF:FM_TX:TMC_DIRECTION <param1> <param2> <param3>	Channel # 1 ~ 3	1 ~ 5	0, 1
READ:FM_TX:TIME? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:TIME <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:RT_TAG_TYPE? <param1> <param2>	Channel # 1 ~ 3	0 ~ 3	
CONF:FM_TX:RT_TAG_TYPE <param1> <param2> <param3>	Channel # 1 ~ 3	0 ~ 3	DUMMY ITEM_TITLE ITEM_ALBUM ITEM_TRACKNUMBER ITEM_ARTIST ITEM_COMPOSITION ITEM_MOVEMENT ITEM_CONDUCTOR ITEM_COMPOSER ITEM_BAND ITEM_COMMENT ITEM_GENRE INFO_NEWS INFO_NEWS_LOCAL INFO_STOCKMARKET INFO_SPORT INFO_LOTTERY INFO_HOROSCOPE INFO_DAILY_DIVERSION INFO_HEALTH INFO_EVENT INFO_SCENE INFO_CINEMA INFO_TV INFO_DATE_TIME INFO_WEATHER INFO_TRAFFIC INFO_ALARM INFO_ADVERTISEMENT INFO_URL INFO_OTHER STATIONNAME_SHORT STATIONNAME_LONG PROGRAMME_NOW PROGRAMME_NEXT PROGRAMME_PART PROGRAMME_HOST PROGRAMME_EDITORIAL_STAFF PROGRAMME_FREQUENCY PROGRAMME_HOMEPAGE PROGRAMME_SUBCHANNEL PHONE_HOTLINE PHONE_STUDIO PHONE_OTHER SMS_STUDIO SMS_OTHER EMAIL_HOTLINE EMAIL_STUDIO EMAIL_OTHER MMS_OTHER CHAT CHAT_CENTER VOTE_QUESTION VOTE_CENTRE RFU_1 RFU_2 PRIVATE_1 PRIVATE_2 PRIVATE_3 DESCRIPTOR_PLACE DESCRIPTOR_APPOINTMENT DESCRIPTOR_IDENTIFIER DESCRIPTOR_PURCHASE DESCRIPTOR_GET_DATA

READ:FM_TX:RT_TAG_START? <param1> <param2>	Channel # 1 ~ 3	0 ~ 3	
CONF:FM_TX:RT_TAG_START <param1> <param2> <param3>	Channel # 1 ~ 3	0 ~ 3	0 ~ 63
READ:FM_TX:RT_TAG_LENGTH? <param1> <param2>	Channel # 1 ~ 3	0 ~ 3	
CONF:FM_TX:RT_TAG_LENGTH <param1> <param2> <param3>	Channel # 1 ~ 3	0 ~ 3	0 ~ 63
READ:FM_TX:RT_MODE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:RT_MODE <param1> <param2>	Channel # 1 ~ 3	OFF, RT, RT+	
READ:FM_TX:EON? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:EON <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:EON_CH? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:EON_CH <param1> <param2>	Channel # 1 ~ 3	FM_RDS_1, FM_RDS_2, FM_RDS_3	
READ:FM_TX:EON_PTY? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:EON_PTY <param1> <param2>	Channel # 1 ~ 3	NEWS, WEATHER, ALLARM	
READ:FM_TX:EON_PID? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:EON_PID <param1> <param2>	Channel # 1 ~ 3	0x0001 ~ 0xFFFF	
READ:FM_TX:EON_PS_NAME? <param1>	Channel # 1 ~ 3		
READ:FM_TX:EON_AF? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:EON_AF <param1> <param2>	Channel # 1 ~ 3	87.6 ~ 107.9	
READ:FM_TX:EON_SWITCH? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:EON_SWITCH <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:AUDIO_VOLUME? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AUDIO_VOLUME <param1> <param2>	Channel # 1 ~ 3	0 ~ 100	
READ:FM_TX:FM_DEVIATION? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:FM_DEVIATION <param1> <param2>	Channel # 1 ~ 3	0 ~ 75	
READ:FM_TX:PILOT_LEVEL_UNIT? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PILOT_LEVEL_UNIT <param1> <param2>	Channel # 1 ~ 3	PERCENT, KHZ	
READ:FM_TX:PILOT_LEVEL_KHZ? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PILOT_LEVEL_KHZ <param1> <param2>	Channel # 1 ~ 3	0 ~ 15	

READ:FM_TX:PILOT_LEVEL_PERCENT? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PILOT_LEVEL_PERCENT <param1> <param2>	Channel # 1 ~ 3	0 ~ 15	FILE
READ:FM_TX:AUDIO_FREQ? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AUDIO_FREQ <param1> <param2>	Channel # 1 ~ 3	0 ~ 20	
READ:FM_TX:AUDIO_SOURCE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AUDIO_SOURCE <param1> <param2>	Channel # 1 ~ 3	FILE, TONE_MONO, TONE_STEREO,SWE EP, EXT_AUDIO_IN	
READ:FM_TX:ALL_FILES? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:ALL_FILES <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:AUDIO_IN_GAIN? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AUDIO_IN_GAIN <param1> <param2>	Channel # 1 ~ 3	0 - 50	
READ:FM_TX:STEREO_MODE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:STEREO_MODE <param1> <param2>	Channel # 1 ~ 3	LEFT_AND_RIGHT, LEFT_ONLY,RIGHT _ONLY	
READ:FM_TX:AUDIO_FREQ_R? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AUDIO_FREQ_R <param1> <param2>	Channel # 1 ~ 3	0 ~ 20	
READ:FM_TX:AUDIO_FREQ_L? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:AUDIO_FREQ_L <param1> <param2>	Channel # 1 ~ 3	0 ~ 20	
READ:FM_TX:SWEEP_START? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:SWEEP_START <param1> <param2>	Channel # 1 ~ 3	0 ~ 20	
READ:FM_TX:SWEEP_STOP? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:SWEEP_STOP <param1> <param2>	Channel # 1 ~ 3	0 ~ 20	
READ:FM_TX:SWEEP_TIME? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:SWEEP_TIME <param1> <param2>	Channel # 1 ~ 3	20 ~ 10000	
READ:FM_TX:RDS_MODE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:RDS_MODE <param1> <param2>	Channel # 1 ~ 3	CONFIG, FILE, OFF	
READ:FM_TX:PRE_EMPHASIS? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:PRE_EMPHASIS <param1> <param2>	Channel # 1 ~ 3	OFF, 50, 75	

READ:FM_TX:WAVE_FILE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:WAVE_FILE <param1> <param2>	Channel # 1 ~ 3	String
READ:FM_TX:WAVE_PROG? <param1>	Channel # 1 ~ 3	
READ:FM_TX:YEAR? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:YEAR <param1> <param2>	Channel # 1 ~ 3	1900 ~ 2200
READ:FM_TX:MONTH? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:MONTH <param1> <param2>	Channel # 1 ~ 3	1 ~ 12
READ:FM_TX:DAY? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:DAY <param1> <param2>	Channel # 1 ~ 3	1 ~ 31
READ:FM_TX:HOUR? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:HOUR <param1> <param2>	Channel # 1 ~ 3	0 ~ 23
READ:FM_TX:MINUTE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:MINUTE <param1> <param2>	Channel # 1 ~ 3	0 ~ 59
READ:FM_TX:MODULATION? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:MODULATION <param1> <param2>	Channel # 1 ~ 3	ON, OFF
READ:FM_TX:LTO? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:LTO <param1> <param2>	Channel # 1 ~ 3	-24 ~ 24
READ:FM_TX:FM_DEVIATION? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:FM_DEVIATION <param1> <param2>	Channel # 1 ~ 3	0 ~ 75
READ:FM_TX:RDS_FILE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:RDS_FILE <param1> <param2>	Channel # 1 ~ 3	String
READ:FM_TX:RDS_DEVIATION? <param1>	Channel # 1 ~ 3	
CONF:FM_RX:RDS_DEVIATION <param1> <param2>	Channel # 1 ~ 3	0~90.0
READ:FM_TX:RDS_PROG? <param1>	Channel # 1 ~ 3	
READ:FM_TX:PS_NAME_HEX? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:PS_NAME_HEX <param1> <param2>	Channel # 1 ~ 3	HEX String(8B)
READ:FM_TX:RT_HEX? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:RT_HEX <param1> <param2>	Channel # 1 ~ 3	HEX String

READ:FM_TX:RT_HEADLINE_MODE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:RT_HEADLINE_MODE <param1> <param2>	Channel # 1 ~ 3	ON, OFF
READ:FM_TX:RT_HEADLINE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:RT_HEADLINE <param1> <param2>	Channel # 1 ~ 3	String
READ:FM_TX:ENCODING_FLAG? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ENCODING_FLAG <param1> <param2>	Channel # 1 ~ 3	UTF_8, UCS_2
READ:FM_TX:RT_HEADLINE_HEX? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:RT_HEADLINE_HEX <param1> <param2>	Channel # 1 ~ 3	HEX String
READ:FM_TX:EON_PS_NAME_HEX? <param1>	Channel # 1 ~ 3	
READ:FM_TX:TEXT_DIRECTION? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:TEXT_DIRECTION <param1> <param2>	Channel # 1 ~ 3	LTR, RTL
READ:FM_TX:M_S? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:M_S <param1> <param2>	Channel # 1 ~ 3	MUSIC, SPEECH
READ:FM_TX:POWER_DBUV? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:POWER_DBUV <param1> <param2>	Channel # 1 ~ 3	17~97
READ:FM_TX:ERT_MODE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ERT_MODE <param1> <param2>	Channel # 1 ~ 3	OFF, eRT, eRT+
READ:FM_TX:ERT? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ERT <param1> <param2>	Channel # 1 ~ 3	String
READ:FM_TX:ERT_HEX? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ERT_HEX <param1> <param2>	Channel # 1 ~ 3	HEX String
READ:FM_TX:ERT_HEADLINE? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ERT_HEADLINE <param1> <param2>	Channel # 1 ~ 3	String
READ:FM_TX:ERT_HEADLINE_HEX? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ERT_HEADLINE_HEX <param1> <param2>	Channel # 1 ~ 3	HEX String
READ:FM_TX:ITEM_RUNNING_BIT? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:ITEM_RUNNING_BIT <param1> <param2>	Channel # 1 ~ 3	0, 1
READ:FM_TX:ITEM_TOGGLE_BIT? <param1>	Channel # 1 ~ 3	

CONF:FM_TX:ITEM_TOGGLE_BIT <param1> <param2>	Channel # 1 ~ 3	0, 1	
READ:FM_TX:ERT_TAG_TYPE? <param1> <param2>	Channel # 1 ~ 3	0 ~ 3	
CONF:FM_TX:ERT_TAG_TYPE <param1> <param2> <param3>	Channel # 1 ~ 3	0 ~ 3	DUMMY ITEM_TITLE ITEM_ALBUM ITEM_TRACKNUMBER ITEM_ARTIST ITEM_COMPOSITION ITEM_MOVEMENT ITEM_CONDUCTOR ITEM_COMPOSER ITEM_BAND ITEM_COMMENT ITEM_GENRE INFO_NEWS INFO_NEWS_LOCAL INFO_STOCKMARKET INFO_SPORT INFO_LOTTERY INFO_HOROSCOPE INFO_DAILY_DIVERSION INFO_HEALTH INFO_EVENT INFO_SCENE INFO_CINEMA INFO_TV INFO_DATE_TIME INFO_WEATHER INFO_TRAFFIC INFO_ALARM INFO_ADVERTISEMENT INFO_URL INFO_OTHER STATIONNAME_SHORT STATIONNAME_LONG PROGRAMME_NOW PROGRAMME_NEXT PROGRAMME_PART PROGRAMME_HOST PROGRAMME_EDITORIAL_STAFF PROGRAMME_FREQUENCY PROGRAMME_HOMEPAGE PROGRAMME_SUBCHANNEL PHONE_HOTLINE PHONE_STUDIO PHONE_OTHER SMS_STUDIO SMS_OTHER EMAIL_HOTLINE EMAIL_STUDIO EMAIL_OTHER MMS_OTHER CHAT CHAT_CENTER VOTE_QUESTION VOTE_CENTRE RFU_1 RFU_2 PRIVATE_1 PRIVATE_2 PRIVATE_3 DESCRIPTOR_PLACE DESCRIPTOR_APPOINTMENT DESCRIPTOR_IDENTIFIER DESCRIPTOR_PURCHASE DESCRIPTOR_GET_DATA
READ:FM_TX:ERT_TAG_START? <param1> <param2>	Channel # 1 ~ 3	0 ~ 3	
CONF:FM_TX:ERT_TAG_START <param1> <param2> <param3>	Channel # 1 ~ 3	0 ~ 3	0 ~ 63
READ:FM_TX:ERT_TAG_LENGTH? <param1> <param2>	Channel # 1 ~ 3	0 ~ 3	
CONF:FM_TX:ERT_TAG_LENGTH <param1> <param2> <param3>	Channel # 1 ~ 3	0 ~ 3	0 ~ 63
READ:FM_TX:ERT_HEADLINE_MODE? <param1>	Channel # 1 ~ 3		
CONF:FM_TX:ERT_HEADLINE_MODE <param1> <param2>	Channel # 1 ~ 3	ON, OFF	
READ:FM_TX:DI_COMPRESSED? <param1>	Channel # 1 ~ 3		

CONF:FM_TX:DI_COMPRESSED <param1> <param2>	Channel # 1 ~ 3	YES, NO
READ:FM_TX:DI_HEAD? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:DI_HEAD <param1> <param2>	Channel # 1 ~ 3	ARTIFICIAL, NOT_ARTIFICAL
READ:FM_TX:DI_MONO_STEREO? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:DI_MONO_STEREO <param1> <param2>	Channel # 1 ~ 3	STEREO, MONO
READ:FM_TX:DI_PTY? <param1>	Channel # 1 ~ 3	
CONF:FM_TX:DI_PTY <param1> <param2>	Channel # 1 ~ 3	STATIC, DYNAMIC

3.4. AM_TX

Command	<param1> Range	<param2> Range
READ:AM_TX:FREQ? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:FREQ <param1> <param2>	Channel # 1 ~ 3	500 ~ 1710
READ:AM_TX:INDEX? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:INDEX <param1> <param2>	Channel # 1 ~ 3	0 ~ 100
READ:AM_TX:AUDIO_FREQ? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:AUDIO_FREQ <param1> <param2>	Channel # 1 ~ 3	0 ~ 20
READ:AM_TX:AUDIO_SOURCE? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:AUDIO_SOURCE <param1> <param2>	Channel # 1 ~ 3	FILE, TONE, SWEEP, EXT_AUDIO_IN
READ:AM_TX:AUDIO_IN_GAIN? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:AUDIO_IN_GAIN <param1> <param2>	Channel # 1 ~ 3	0 - 50
READ:AM_TX:POWER_UNIT? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:POWER_UNIT <param1> <param2>	Channel # 1 ~ 3	DBM, DBUV
READ:AM_TX:POWER_DBM? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:POWER_DBM <param1> <param2>	Channel # 1 ~ 3	-90 ~ -10
READ:AM_TX:POWER_DBUV? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:POWER_DBUV <param1> <param2>	Channel # 1 ~ 3	17~ 97
READ:AM_TX:SWEEP_START? <param1>	Channel # 1 ~ 3	

CONF:AM_TX:SWEEP_START <param1> <param2>	Channel # 1 ~ 3	0 ~ 20
READ:AM_TX:SWEEP_STOP? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:SWEEP_STOP <param1> <param2>	Channel # 1 ~ 3	0 ~ 20
READ:AM_TX:SWEEP_TIME? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:SWEEP_TIME <param1> <param2>	Channel # 1 ~ 3	20 ~ 10000
READ:AM_TX:WAVE_FILE? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:WAVE_FILE <param1> <param2>	Channel # 1 ~ 3	String
READ:AM_TX:WAVE_PROG? <param1>	Channel # 1 ~ 3	
READ:AM_TX:ALL_FILES? <param1>	Channel # 1 ~ 3	
CONF:AM_TX:ALL_FILES <param1> <param2>	Channel # 1 ~ 3	ON, OFF
CONF:AM_TX:CONTENTS_RST <param1>	Channel # 1 ~ 3	

3.5. FM_RX

Command	<param> Range
READ:FM_RX:FREQ?	
CONF:FM_RX:FREQ <param>	76.0 ~ 107.9
READ:FM_RX:ENABLE?	
CONF:FM_RX:ENABLE <param>	NO, YES
READ:FM_RX:RDS_STATUS?	
EXEC:FM_RX:RDS_RESET	
READ:FM_RX:RSSI?	
READ:FM_RX:SNR?	
READ:FM_RX:VOLUME?	
CONF:FM_RX:VOLUME <param>	0 ~ 10
READ:FM_RX:DE_EMPHASIS?	
CONF:FM_RX:DE_EMPHASIS <param>	OFF, 50, 75

3.6. AUDIO

Command	<param> Range
READ:AUDIO:ENABLE?	
CONF:AUDIO:ENABLE <param>	NO, YES
READ:AUDIO:TRIGGER?	
CONF:AUDIO:TRIGGER <param>	OFF, LEFT, RIGHT
READ:AUDIO:SINAD_L?	
READ:AUDIO:SINAD_R?	
READ:AUDIO:THDN_L?	
READ:AUDIO:THDN_R?	
READ:AUDIO:SNR_L?	
READ:AUDIO:SNR_R?	
READ:AUDIO:FREQ_R?	
READ:AUDIO:FREQ_L?	
READ:AUDIO:THD_L?	
READ:AUDIO:THD_R?	
READ:AUDIO:REF_FREQ_L?	
CONF:AUDIO:REF_FREQ_L <param>	0.4 ~ 4
READ:AUDIO:REF_FREQ_R?	
CONF:AUDIO:REF_FREQ_R <param>	0.4 ~ 4
READ:AUDIO:AVG_NUM?	
CONF:AUDIO:AVG_NUM <param>	1 ~ 50
READ:AUDIO:PK_PK_L?	
READ:AUDIO:PK_PK_R?	
READ:AUDIO:RMS_L?	
READ:AUDIO:RMS_R?	
READ:AUDIO:DBU_L?	
READ:AUDIO:DBU_R?	

READ:AUDIO:WEIGHTING_FILTER?	
CONF:AUDIO:WEIGHTING_FILTER <param>	OFF, A_WEIGHT, C_WEIGHT, CCIR
READ:AUDIO:LPF?	
CONF:AUDIO:LPF <param>	OFF 1kHz 2kHz 3kHz 4kHz 5kHz 6kHz 7kHz 8kHz 9kHz 10kHz 11kHz 12kHz 13kHz 14kHz 15kHz 16kHz 17kHz 18kHz 19kHz 20kHz
EXEC:AUDIO:AVG_RESET	
READ:AUDIO:CURRENT_AVG_NUM?	
READ:AUDIO:IN_LEVEL?	
READ:AUDIO:SEPARATE_L?	
READ:AUDIO:SEPARATE_R?	

RWC-HQ

Capilano Business Park II
#209, 980 W 1st St, North Vancouver, BC V7P 3N4, CANADA
Tel : +1-778-322-7601
E-mail : sales@RedwoodComm.com

RWC-AP

36 ROBINSON ROAD #21 CITY HOUSE SINGAPORE 068877
Tel : +8613611166258 (WhatsApp)
E-mail : tony.tian@redwoodcomm.asia

RWC-KR

#5001-4, Ilbandong, SK M-city,
195 Baengma-ro, Ilsandong-gu, Goyang-si, Gyeonggi-do, Korea
Tel: +82-70-7727-7011
E-mail : sales@RedwoodComm.com

Webpage http://RedwoodComm.com/